



Stevens GHT Operation with ZENO 3200

CT command set to "0". GT command set to "2". Special cable used with connection at ZENO end for "B" 5V sensor voltage. This voltage is used as a wakeup to the GHT prior to each data transfer from the ZENO. Warm-up is set for 5 seconds. Reporting output from ZENO is set for 2 seconds less than the recording interval.

The GT command in the GHT enables the GPS time string to be sent to the ZENO after every GPS update in the GHT. The "2" signifies a 2 second wakeup time for the ZENO. The command string is a CCSAIL string. To disable this update, set the GT command to "0".